

**WEEE Number: 80133970** 

# INSTALLATION INSTRUCTION

# FIRE RATED DOWNLIGHT FITTING

#### **TECHNICAL DATA:**

Model	VT-701
Base	GU10
Body Type	Steel
Cutting Size	Ø65mm
Fire Rated	30-60-90 MIN
IP Rating	IP20
Operation Temperature	-20 to +40°c
Dimension	Ø80mmx115mm
Input Power	AC:220-240V,50/60Hz

QUICK CONNECTOR: Loop in and Loop out without screw









### **INTRODUCTION & WARRANTY**

Thank you for selecting and buying V-TAC product. V-TAC will serve you the best. Please read these instructions carefully before starting the installation and keep this manual handy for future reference. If you have any another query, please contact our dealer or local vendor from whom you have purchased the product. They are trained and ready to serve you at the best. The warranty is valid for 3 years from the date of purchase. The warranty does not apply to damage caused by incorrect installation or abnormal wear and tear. The company gives no warranty against damage to any surface due to incorrect removal and installation of the product. The products are suitable for 10-12 Hours Daily operation. Usage of product for 24 Hours a day would void the warranty. This product is warranted for manufacturing defects only.



This marking indicates that this product should not be disposed of with other household wastes.



Caution, risk of electric shock.

#### **WARNING!**

- 1. Please make sure to turn off the power before starting the installation.
- 2. Installation must be performed by a certified person.
- 3. Proper grounding should be ensured throughout the installation.
- 4. For Indoor Use only.




Luminaires not suitable for covering with thermally insulating material.

# **INSTALLATION INSTRUCTIONS**

- 1. Switch off the power before starting the installation.
- 2. Ensure that the depth is a minimum 110mm, and the thickness of the ceiling is maximum 35mm (Ref Pic 1).
- 3. Cut a Ø65mm round fixing hole, as per the cut-out using a proper tool (Ref Pic 2).
- 4. Make the electrical connections to the terminal block (Ref Pic 3).
- 5. Remove the bulb retaining ring. Install the bulb into the holder and fix it into in the fitting using the retaining ring (Ref Pic 4).
- 6. Holding the spring clip upward and with the fixture hanging down through the middle, install the fitting into the hole and allow springs to pull the fitting up to the ceiling (Ref Pic 5 & 6).
- 7. Switch ON the power to test the light.

## **INSTALLATION INSTRUCTIONS**

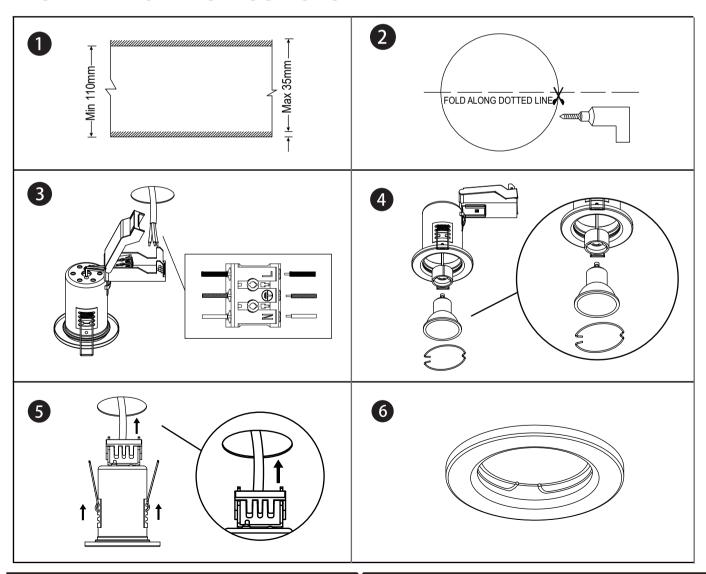

IN CASE OF ANY QUERY/ISSUE WITH THE PRODUCT PLEASE REACH OUT TO US AT SUPPORT@VTACEXPORTS.COM V-TAC HOUSE, KELPATRICK ROAD, SLOUGH, BERKSHIRE, SL1 6BW, UK.